

KNOTWOODTM

Quick Start Guide.

Geofix Fence

Before Installation.

You might need the following tools.



Screws



Level




Measuring Tape




Rubber Mallet



Drop-Saw

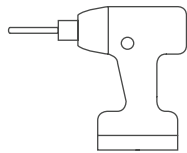

Impact Driver/Drill

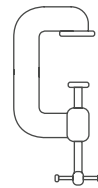

Clamp

Pre Installation Checklist.



Delivery Inspection.

- Check packs for freight damage on arrival.
- Report any damage to your Knotwood rep within 24 hours.



Unpacking.

- Cut nylon straps and remove the outer wrap.
- Check ends of the profiles and trim if required.
- Take care not to scratch the coated material during handling.



Cutting Tools.

- Compound mitre saw (Aluminium multi-tooth blade)




Fasteners.


- Use 304 or 316 grade stainless steel.
- In non-marine zone, hot-dip galvanised fasteners may be used.

Solution Profiles.


Post.



KEGS10010032
Geometric - Square - 100 x100mm (3)

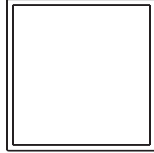

KEGS656525
Geometric - Square - 65 x 65mm

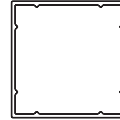


KEGSP505016
Geometric - Square - 50 x 50mm (1.6)
- Pips

Rails.



KEESC3030
U Channel - 1 Way - 30 x 30mm



KEESC2550
U Channel - 1 Way - 50mm

Infills.




KEIS
Infill - 20mm

Installation.

Assembly Instructions.

Step 1.

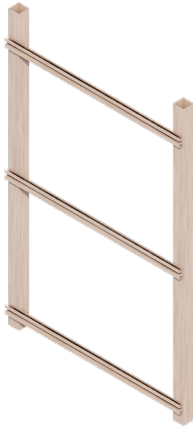

Assemble the frame by fastening the one-way profiles to the side posts.

Step 2.



Secure the vertical battens to the one-way profiles.

Step 3.



Close the batten slots using the infills on all the one-way rail battens.

Installation.

Assembly Instructions.

Step 4.



Close the open ends of the one way profiles with the end caps.

Step 5.



Close the top and bottom ends of the vertical battens with the end caps.



KNOTWOODTM

KNOTWOOD AUS

sales@knotwood.com.au

1 300 566 896

7/63 Burnside Road,
Stapylton, QLD 4207 Australia

KNOTWOOD USA

sales@knotwood.com

+1 855 566 8966

5555 West Roosevelt Street Suite,
400 Phoenix, AZ 85043 United States

KNOTWOOD UK

sales@knotwood.co.uk

0800 131 3165

Unit 44, 45 Wolston Croft,
Northwich CW8 4DL, United Kingdom