



KNOTWOOD™

Quick Start Guide.

Geofix Pedestrian Gate

Before Installation.

You might need the following tools.



Screws



Level




Measuring Tape




Rubber Mallet



Drop-Saw

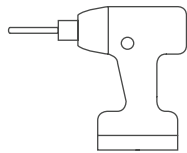

Impact Driver/Drill

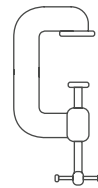

Clamp

Pre Installation Checklist.



Delivery Inspection.

- Check packs for freight damage on arrival.
- Report any damage to your Knotwood rep within 24 hours.



Unpacking.

- Cut nylon straps and remove the outer wrap.
- Check ends of the profiles and trim if required.
- Take care not to scratch the coated material during handling.



Cutting Tools.

- Compound mitre saw (Aluminium multi-tooth blade)




Fasteners.


- Use 304 or 316 grade stainless steel.
- In non-marine zone, hot-dip galvanised fasteners may be used.

Solution Profiles.


Post.



KEGS10010032
Geometric - Square - 100 x100mm (3)

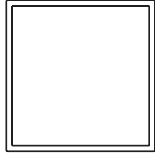

KEGS656525
Geometric - Square - 65 x 65mm

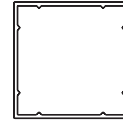


KEGSP505016
Geometric - Square - 50 x 50mm (1.6) - Pips

U Channels.



KESC3030
U Channel - 1 Way - 30 x 30mm




KESC2550
U Channel - 1 Way - 50mm




KEIS
Infill - 20mm

Frames.

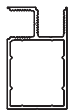

KESG6640
Gate Frame - Channel - 66 x 40mm

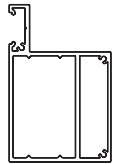


KESG10065
Gate Frame - Rail - 100 x 65mm

Gate Accessories.



Gate - Hinge - Topklik, Adjustable (Safetech)
90mm(H)

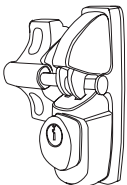

Gate - Lock - Viper (Safetech)

Installation.


Support Surface Preparation.



The following system must be assembled separately prior to installation. Once the gate is complete, it can be fixed to the fence.



Assembly Instructions.

Step 1.

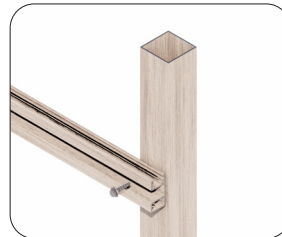

First, assemble the frame using, a batten base for the bottom and one way profiles for top and center.

Step 2.

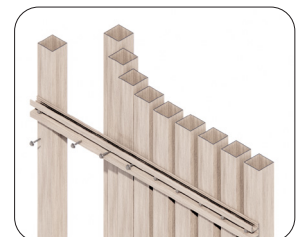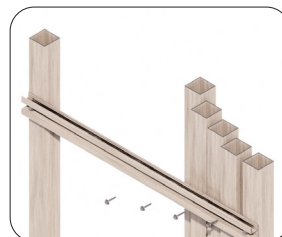


Fix the battens keeping regular intervals .

Installation.


Assembly Instructions.

Step 3.

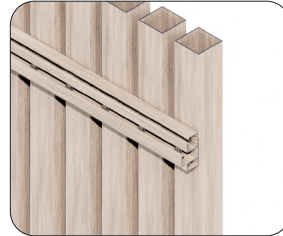


Close the batten slots using the infills.

Step 4.

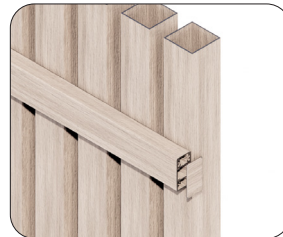

Close the top and bottom ends of the one way profiles with the end caps.

Step 5.

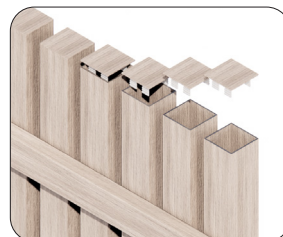

Close the top ends of the vertical battens with the end caps.

Installation.

Assembly Instructions.

Step 6.




Attach the hinge wings of the gate before mounting it onto the fence.

Step 7.



Mount the gate to the fence by securing the remaining hinge wings to the post.

Step 8.

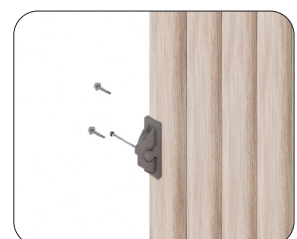

Install the lock.



KNOTWOODTM

KNOTWOOD AUS

sales@knotwood.com.au

1 300 566 896

7/63 Burnside Road,
Stapylton, QLD 4207 Australia

KNOTWOOD USA

sales@knotwood.com

+1 855 566 8966

5555 West Roosevelt Street Suite,
400 Phoenix, AZ 85043 United States

KNOTWOOD UK

sales@knotwood.co.uk

0800 131 3165

Unit 44, 45 Wolston Croft,
Northwich CW8 4DL, United Kingdom