



KNOTWOOD[™]

Quick Start Guide.

Fixed Louvre

Before Installation.

You might need the following tools.



Screws




Level




Measuring Tape




Rubber Mallet

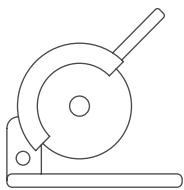

Drop-Saw

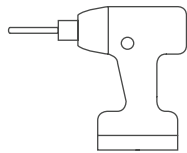

Impact Driver/Drill



Clamp

Pre Installation Checklist.



Delivery Inspection.

- Check packs for freight damage on arrival.
- Report any damage to your Knotwood rep within 24 hours.



Unpacking.

- Cut nylon straps and remove the outer wrap.
- Check ends of the profiles and trim if required.
- Take care not to scratch the coated material during handling.



Cutting Tools.

- Compound mitre saw (Aluminium multi-tooth blade)



Fasteners.

- Use 304 or 316 grade stainless steel.
- In non-marine zone, hot-dip galvanised fasteners may be used.


Solution Profiles.

Geometric - Slat.





KES6516
Geometric - Slat - 65 x 16mm

65mm Routed Frames.




KELF65L
Louvre - Routed Frame - 65mm
Left

Side view



KELF65R
Louvre - Routed Frame - 65mm
Right

Side view




Blade.




KELB
Shutter - Blade - 88mm

88mm Routed Frames.




KELF88L
Louvre - Routed Frame - 88mm
Left

Side view



KELF88R
Louvre - Routed Frame - 88mm
Right

Side view



Top/Bottom Frame.



KELFR
Louvre - Routed Frame - 65mm
Top/Bottom


Infill.



KEIS
Infill - 20mm

Installation.


Support Surface Preparation.

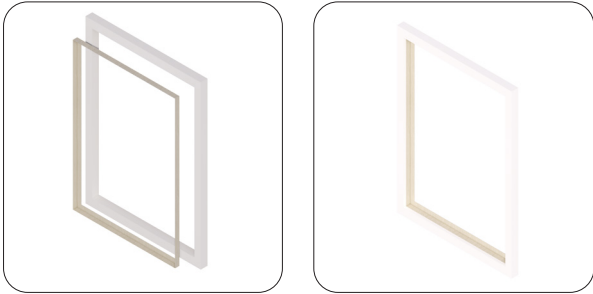

This solution requires that the components be installed at equal intervals. It is recommended to mark and confirm the desired spacing on the surface prior to installation.

Assembly Instructions.

Step 1.

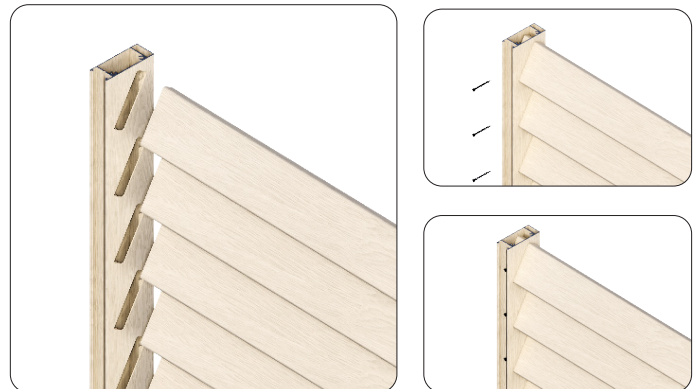

To begin, secure the Geometric - Slat - 65 x 16mm (KES6516) to both the Louvre - Routed Frame - 65mm - Left (KELF65L) and Louvre - Routed Frame - 65mm - Right (KELF65R).

Step 2.



Once the Geometric - Slat - 65 x 16mm (KES6516) are secured to both the left and right routed frames. Place the Louvre - Routed Frame - 65mm Top/Bottom (KELFR), on top of the side frames making sure all ends of the profile are aligned and straight. Then secure through the side frames screw flutes with fixings.

Installation.


Assembly Instructions.

Step 3.



Once the all frames is all secured use the Infill - 20mm (KEIS) to enclose the frame hiding all fixings used to secure the Geometric - Slat - 65 x 16mm (KES6516) into place.

Step 4.

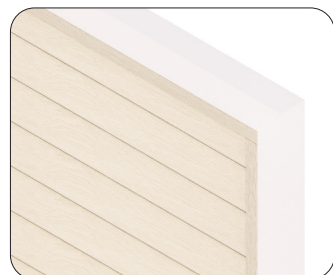

Place the frame in the desired opening.



KNOTWOOD™

KNOTWOOD AUS

sales@knotwood.com.au

1 300 566 896

7/63 Burnside Road,
Stapylton, QLD 4207 Australia

KNOTWOOD UK

sales@knotwood.co.uk

0 800 131 3165

Unit 44, 45 Wolston Croft,
Northwich CW8 4DL, United Kingdom

KNOTWOOD USA

sales@knotwood.com

1 855 566 8966

5555 West Roosevelt Street Suite,
400 Phoenix, AZ 85043 United States