

KNOTWOOD[™]

Quick Start Guide.


Geoline Sliding Gate

Before Installation.

You might need the following tools.



Screws

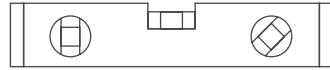


Level




Measuring Tape




Rubber Mallet

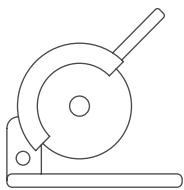

Drop-Saw

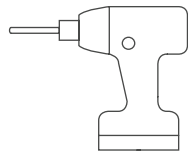

Impact Driver/Drill

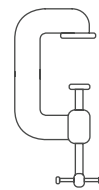

Clamp

Pre Installation Checklist.

Delivery Inspection.

- Check packs for freight damage on arrival.
- Report any damage to your Knotwood rep within 24 hours.

Unpacking.

- Cut nylon straps and remove the outer wrap.
- Check ends of the profiles and trim if required.
- Take care not to scratch the coated material during handling.

Cutting Tools.

- Compound mitre saw (Aluminium multi-tooth blade)

Fasteners.

- Use 304 or 316 grade stainless steel.
- In non-marine zone, hot-dip galvanised fasteners may be used.

Solution Profiles.

Rectangles.




KES3816
Slat 38mm x 16mm



KES6516
Slat 65mm x 16mm




KES10016
Slat 100mm x 16mm




KES15016
Slat 150mm x 16mm

Gate Frame.

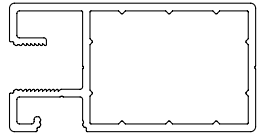


KAGCL
Gate Frame Large 100 x 50mm

Coner Stakes.

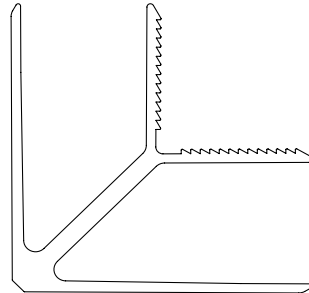


KAGCL
Gate Corner Stake - 125mm (L)


Components.

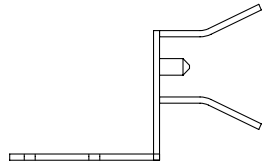


KAGS
Sliding Gate
Stop Guide -
Rear

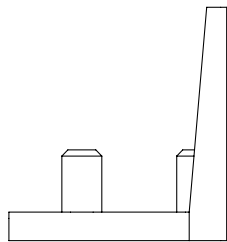

KAGB
Sliding Gate Top
Roller Bracket

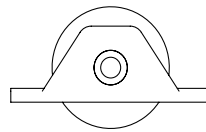

KAGW
Sliding Gate
Bottom Well

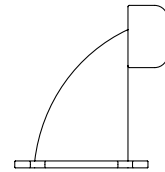

KAGG
Sliding Gate
Guide Stop



KESGT
Sliding Gate
Track

Infills.



KEIS
Infill - 20mm

Installation.


Support Surface Preparation.



The following system must be assembled separately prior to installation. Once the gate is complete, it can be fixed to the fence.

Assembly Instructions.

Step 1.

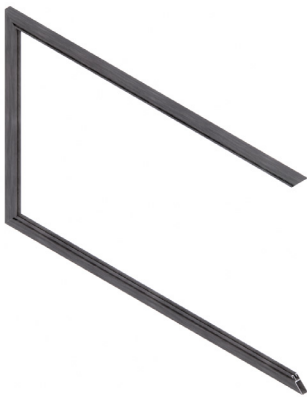

First, secure one side, along with the top and bottom of the frame, using the corner stake to fix the joints, while leaving the opposite side of the frame open.

Step 2.



Slide in the first slat and fix the top and side to the frame.

Installation.

Assembly Instructions.

Step 3.



Insert and fix the slats into the frame, alternating a spacer and a slat to maintain consistent intervals.

Step 4.



Secure the remaining side of the frame, using the corner stake to fix the joints and screw it to the last slat.

Step 5.



Close the frame grooves with the specified infills.

Installation.


Assembly Instructions.

Step 6.



Place the bottom wheels under each end of the gate and screw them to the frame.

Step 7.

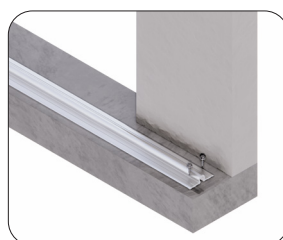

Once the gate is completed, fix the sliding track to the support surface.

Step 8.




Mount the gate Top Roller Bracket and the sliding stop front guide at each end of the gate.

Installation.

Assembly Instructions.

Step 9.

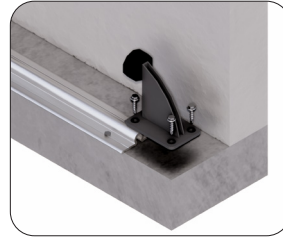

Install the sliding stop rear guide at the end of the rail.



KNOTWOOD™

KNOTWOOD AUS

sales@knotwood.com.au

1 300 566 896

7/63 Burnside Road,
Stapylton, QLD 4207 Australia

KNOTWOOD USA

sales@knotwood.com

+1 855 566 8966

5555 West Roosevelt Street Suite,
400 Phoenix, AZ 85043 United States

KNOTWOOD UK

sales@knotwood.co.uk

0800 131 3165

Unit 44, 45 Wolston Croft,
Northwich CW8 4DL, United Kingdom