



KNOTWOOD™

Quick Start Guide.

Window Hood

Before Installation.

You might need the following tools.



Screws



Level




Measuring Tape




Rubber Mallet



Drop-Saw

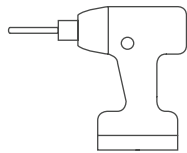

Impact Driver/Drill

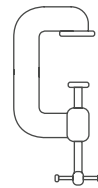

Clamp

Pre Installation Checklist.



Delivery Inspection.

- Check packs for freight damage on arrival.
- Report any damage to your Knotwood rep within 24 hours.



Unpacking.

- Cut nylon straps and remove the outer wrap.
- Check ends of the profiles and trim if required.
- Take care not to scratch the coated material during handling.



Cutting Tools.

- Compound mitre saw (Aluminium multi-tooth blade)



Fasteners.

- Use 304 or 316 grade stainless steel.
- In non-marine zone, hot-dip galvanised fasteners may be used.


Solution Profiles.

Brackets



KEB5050M
Batten Bracket - 50 x 50mm (M)

Corner Stakes

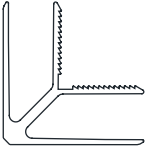


KAGCS
Gate Corner Stake - 85mm (S)


Battens




KEB5050F

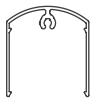


KEB5054FD

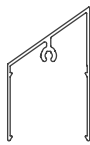


KEB5080FA

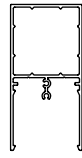


KEB10050F

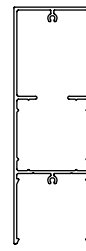

KEB15050F

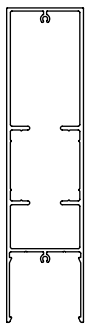

KEB50200F

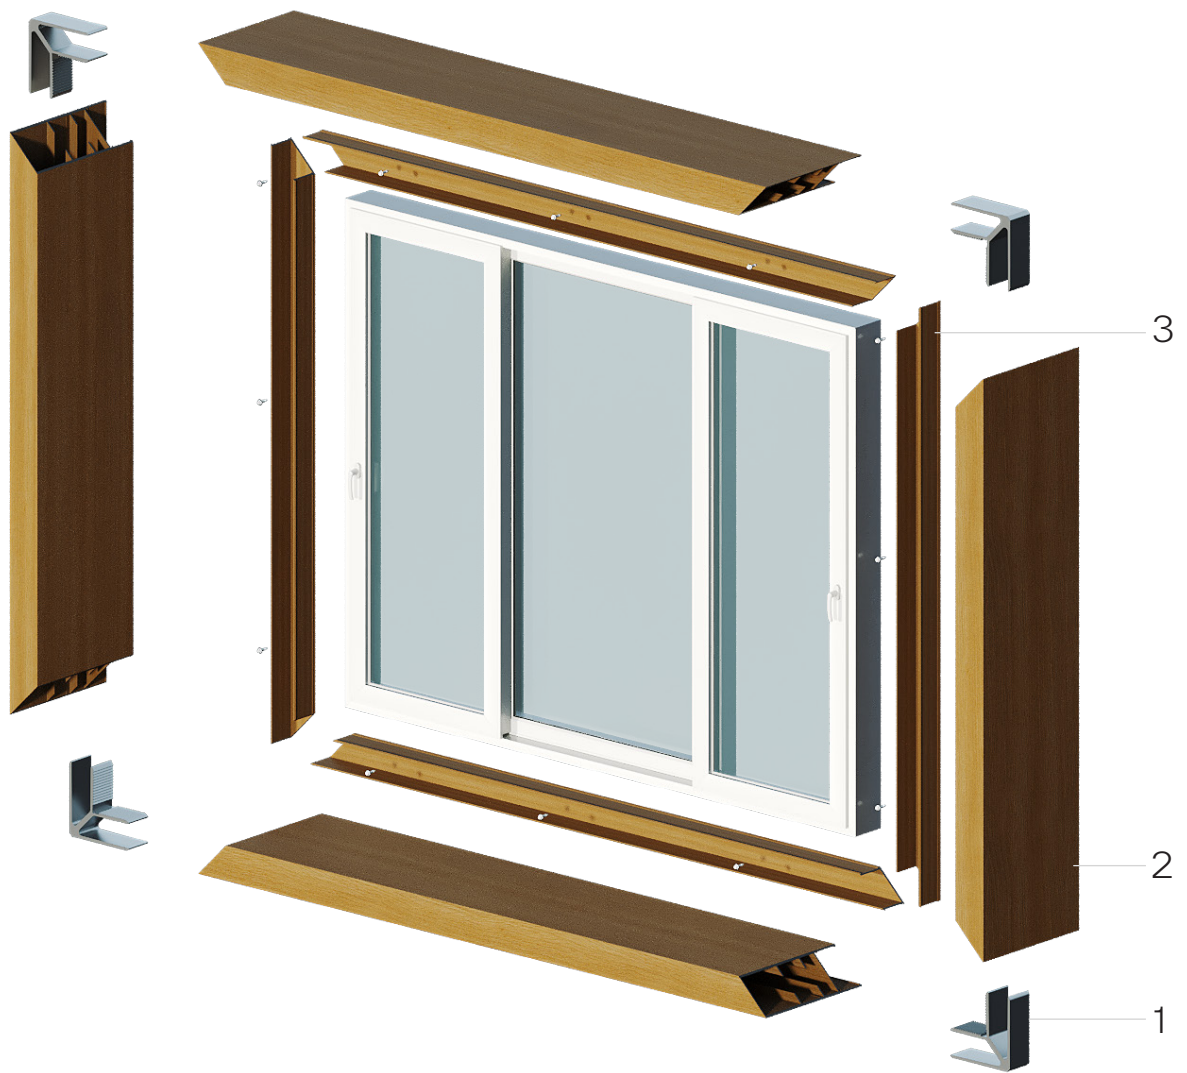

Components

1. Corner Stake - 85mm
KAGCS

2. Batten - 50 x 200mm
KEB50200F

3. Batten Bracket - 50 x 50mm
KEB5050M

Installation.


Support Surface Preparation.



Appropriate fasteners must be selected and installed to ensure adequate structural support, secure fixing, and long-term system performance. Fixing requirements will vary depending on the window framing material and construction.

Assembly Instructions.

Step 1.

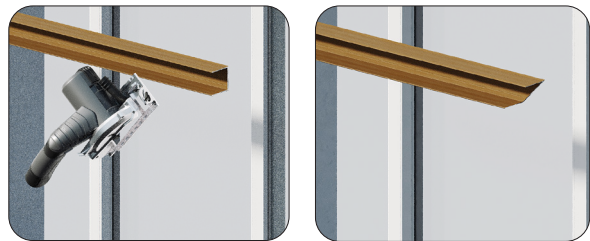

To begin cut the **KEB5050M** profile to the required length with a 45-degree mitre cut at the end as shown. Ensure the cut is clean and accurate to achieve a neat finish and proper alignment during installation. do this for all required battens.

Step 2.



Install the **KEB5050M** profile around the window frame and secure as shown using appropriate fasteners. Ensure the profile is aligned correctly to achieve a clean, finished appearance.

Installation.


Assembly Instructions.

Step 3.




Cut the **KEB50200F** profile to the required length, applying a 45-degree mitre cut to the end as shown. Ensure all cuts are clean and accurate to achieve proper alignment and a neat finish during installation. Repeat this process for all required battens.

Step 4.

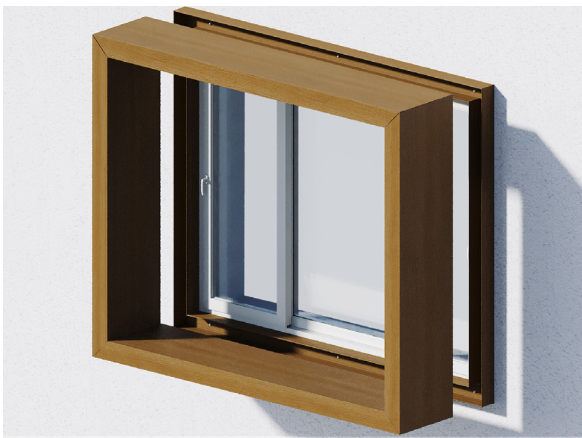

Using the **KAGCS** corner stake, securely fit the accessory into the batten corner, then insert the adjoining **KEB50200F** battens to complete the corner connection.

Step 5.

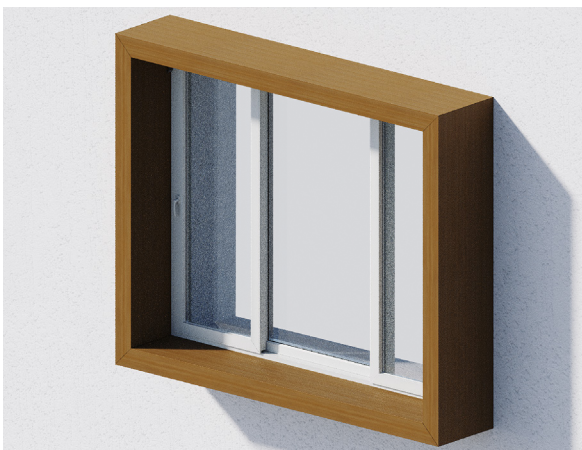

Once all **KEB50200F** battens are in position, clip each batten securely into the Brackets as shown.



KNOTWOODTM

KNOTWOOD AUS

sales@knotwood.com.au

1 300 566 896

7/63 Burnside Road,
Stapylton, QLD 4207 Australia

KNOTWOOD USA

sales@knotwood.com

+1 855 566 8966

5555 W Roosevelt Street, Suite 400, Phoenix
AZ 85043 United States

KNOTWOOD UK

sales@knotwood.co.uk

0800 131 3165

Unit 44, 45 Wolston Croft,